

DC-08 Schematic Notes

1. Pin configuration pads - Allow for P1,P2, and P3 to be rewired to the DB9 with different configurations.

2. Auto/Manual Select Switch – Switches the speed control between a manual speed potentiometer connected to the Quick Connect Terminals, or a control voltage provided on the DB9 Connector.

See Engineering Note EN010 for depiction on connecting the DC-08 to the GeckoDrive™ G540 stepper drive.

