

ModIO RS-485 jumper settings

- JP4 1-2 Select RX Source
- JP7 1-2 Select RX Source
- JP12 1-2 Select RX Source
- H/F* 1-2 Select ½ Duplex

- JP9 ON RS485 Termination (if required)

RS485
twisted pair

